


Steptec parallel connector

Instructions for Use

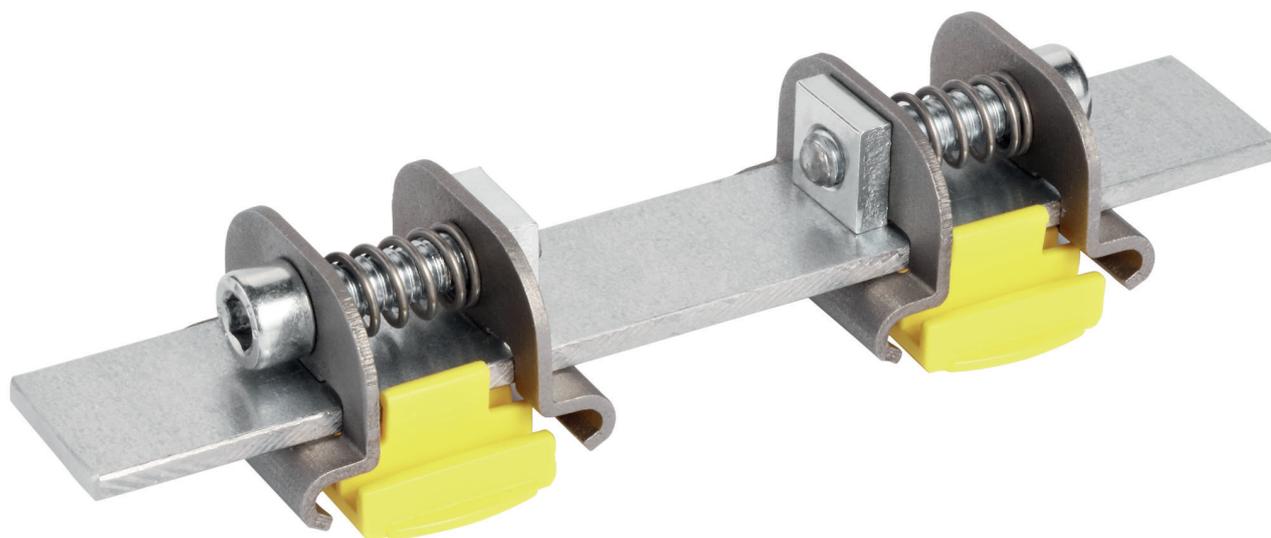

suitable for Steptec mounting rail model 8401

Model
8414

Year built:
from 04/2016

en_INT

viega

Table of contents

1	About these instructions for use	4
1.1	Target groups	4
1.2	Labelling of notes	4
1.3	About this translated version	5
2	Product information	6
2.1	Intended use	6
2.1.1	Areas of use	6
2.2	Product description	6
2.2.1	Overview	6
2.2.2	Installation variants	7
3	Handling	11
3.1	Assembly information	11
3.1.1	Required tools	11
3.1.2	Installation dimensions	11
3.2	Assembly	11
3.2.1	Mounting the parallel connector	11
3.3	Disposal	13

1 About these instructions for use

Trade mark rights exist for this document, further information can be found at viega.com/legal.

1.1 Target groups

The information in this instruction manual is directed at the following groups of people:

- Heating and sanitary professionals and trained personnel

It is not permitted for individuals without the abovementioned training or qualification to mount, install and, if required, service this product. This restriction does not extend to possible operating instructions.

The installation of Viega products must take place in accordance with the general rules of engineering and the Viega instructions for use.

1.2 Labelling of notes

Warning and advisory texts are set aside from the remainder of the text and are labelled with the relevant pictographs.



DANGER!

This symbol warns against possible life-threatening injury.



WARNING!

This symbol warns against possible serious injury.



CAUTION!

This symbol warns against possible injury.



NOTICE!

This symbol warns against possible damage to property.



Notes give you additional helpful tips.

1.3 About this translated version

This instruction for use contains important information about the choice of product or system, assembly and commissioning as well as intended use and, if required, maintenance measures. The information about the products, their properties and application technology are based on the current standards in Europe (e. g. EN) and/or in Germany (e. g. DIN/DVGW).

Some passages in the text may refer to technical codes in Europe/Germany. These should serve as recommendations in the absence of corresponding national regulations. The pertinent national laws, standards, regulations and guidelines, as well as other technical guidelines, have priority over German/European guidelines in this manual: The information is not binding for other countries and territories and should, as mentioned, be considered as support.

2 Product information

2.1 Intended use

2.1.1 Areas of use

The parallel connector is intended for mounting to the Steptec mounting rail, model 8401. The parallel connector allows for the realization of front-wall installation and partition walls of small installation depth (≤ 145 mm).

2.2 Product description

2.2.1 Overview


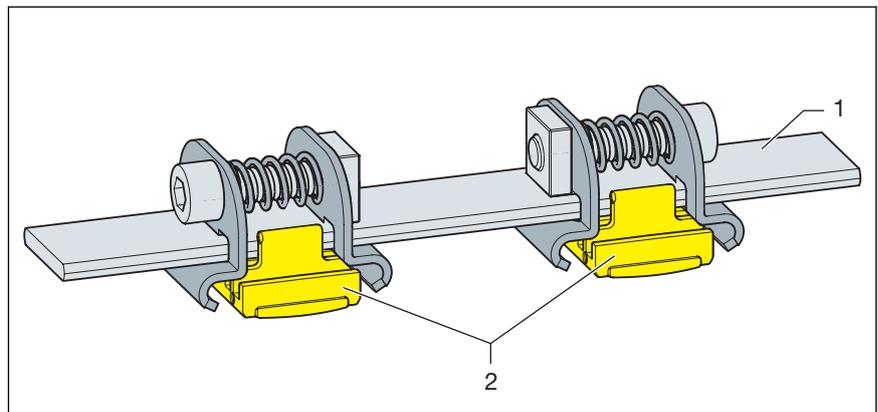


Fig. 1: Overview

- 1 – parallel connector
- 2 – plug-in pieces


2.2.2 Installation variants

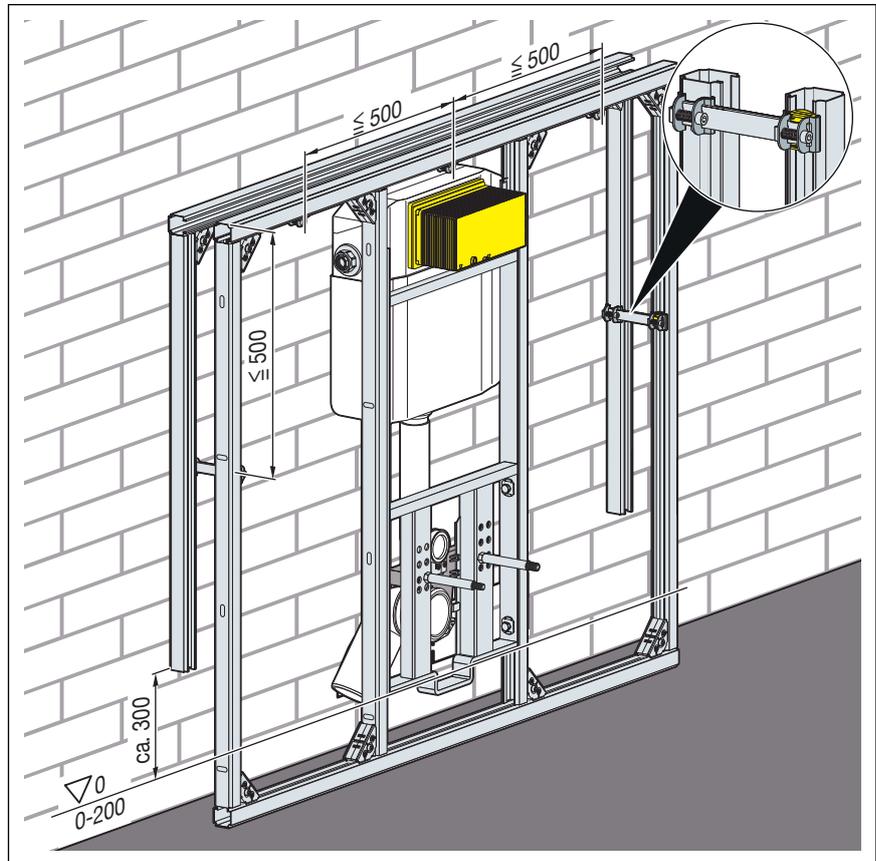

Mounting the Steptec WC module with a max. installation depth of 145 mm.




Comply with the mounting dimensions. Distance between the Steptec parallel connectors max. 500 mm. Partition wall to be covered on one side.

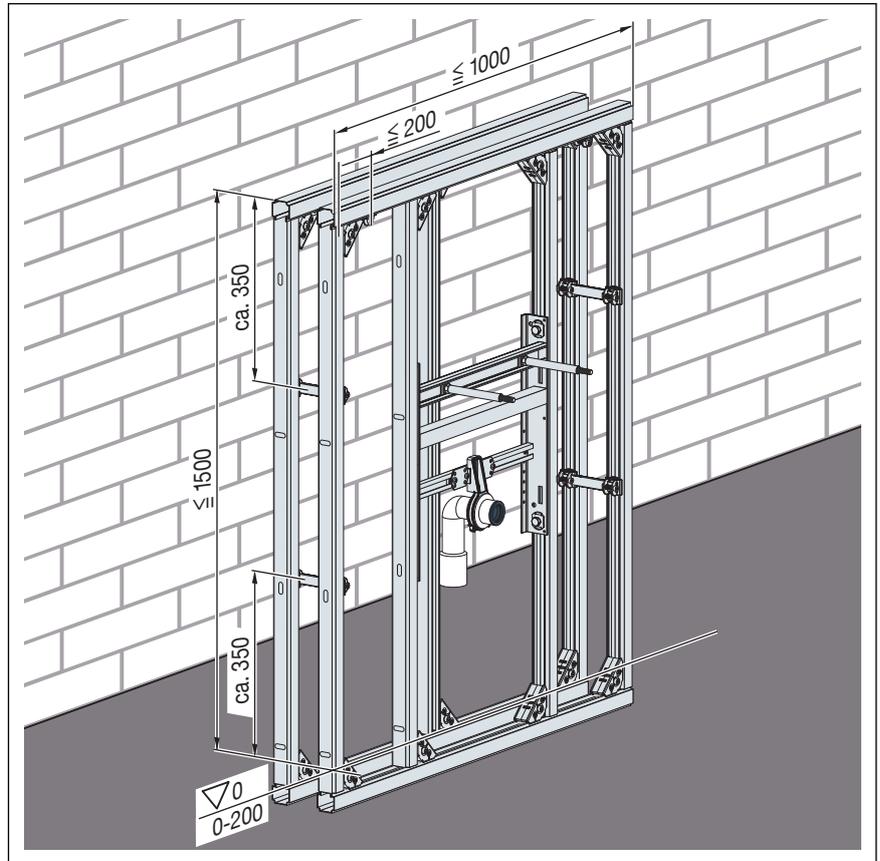


Free-standing room partition



Suitable for urinal, washbasin and fitting holder.

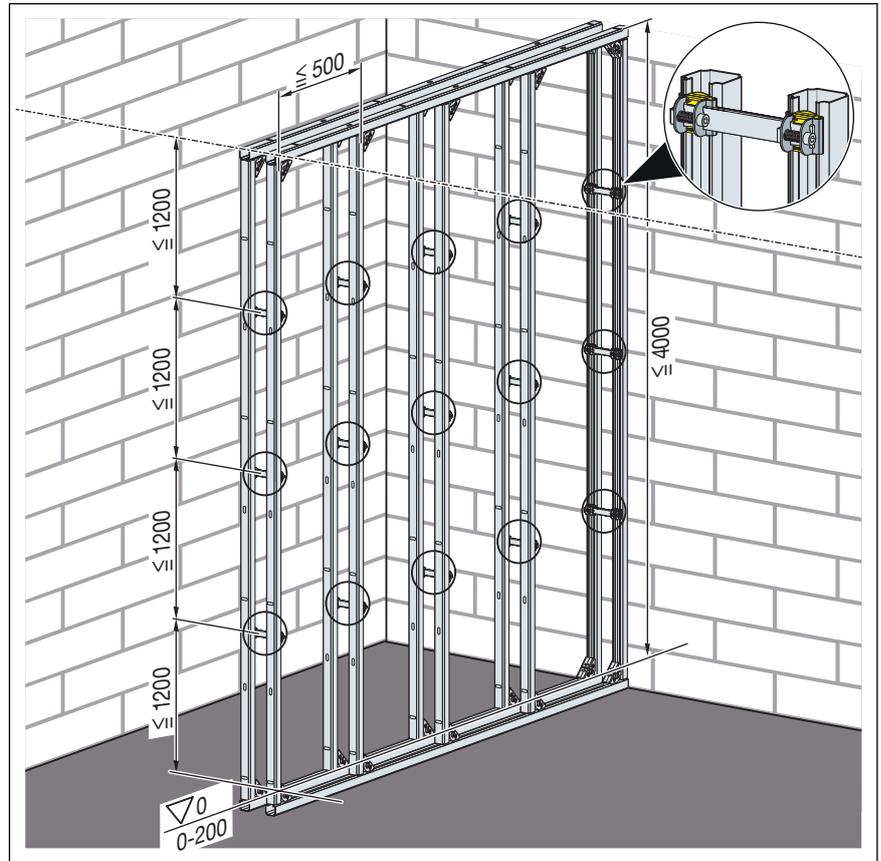

Steptec partition wall (max. height 4 m). Installation depth (max. 145 mm). Distance between parallel connectors max. 1.2 m.

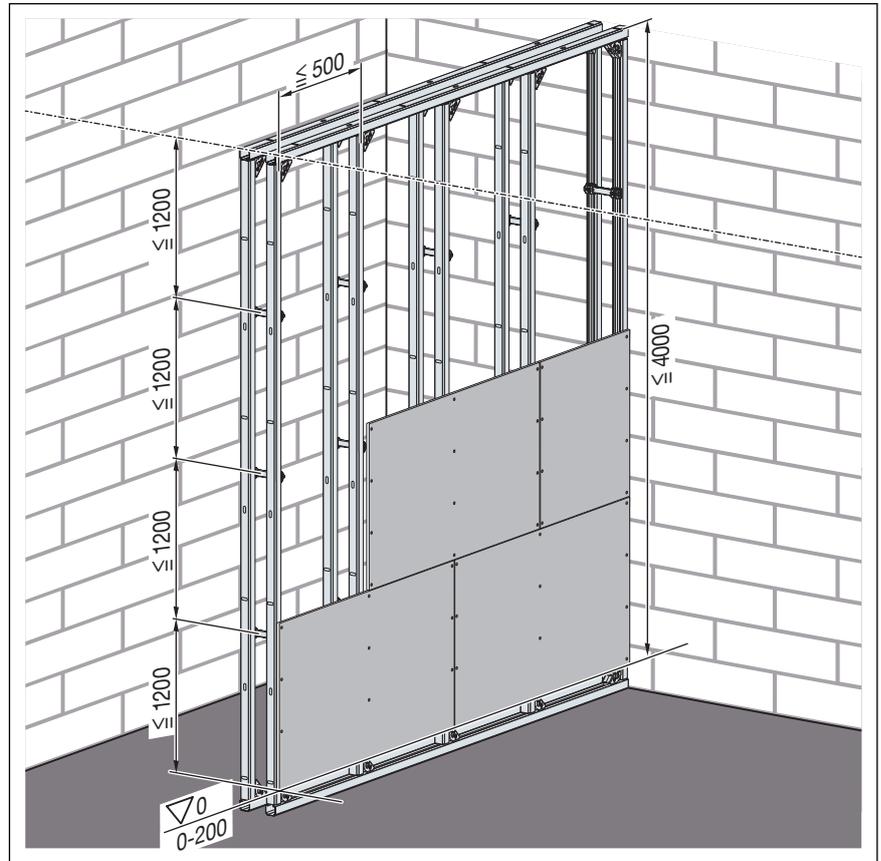

Cover Steptec support profiles on one side.

3 Handling

3.1 Assembly information

3.1.1 Required tools

The following tools are required for mounting:

- Allen key: 5 mm
- hacksaw

3.1.2 Installation dimensions


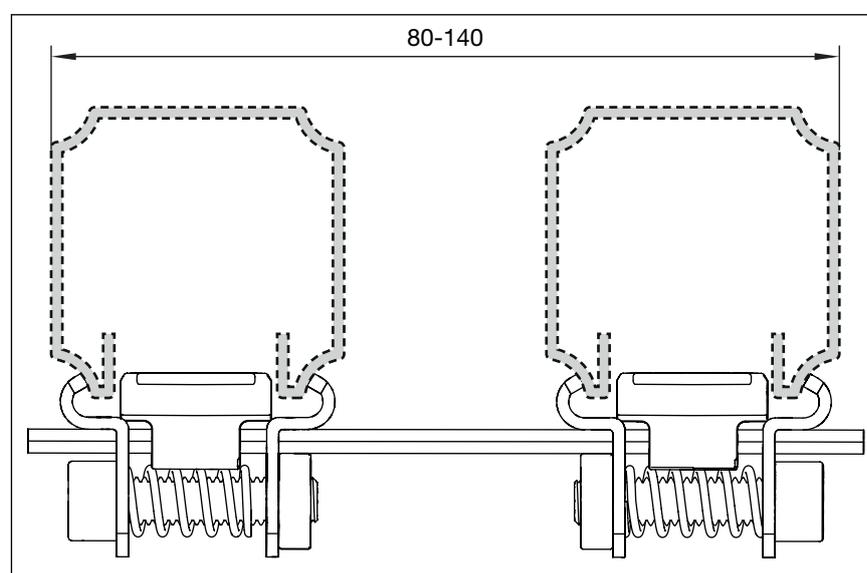


Fig. 2: Dimensional drawing

3.2 Assembly


3.2.1 Mounting the parallel connector

Mounting on the open side

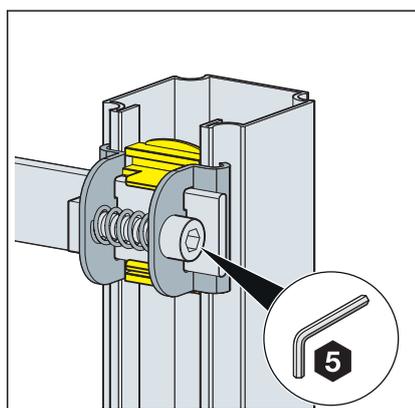


- Mount the parallel connector with the plug-in piece on the open side of the mounting rail. Use an Allen key (SW 5).

Mounting on the closed side

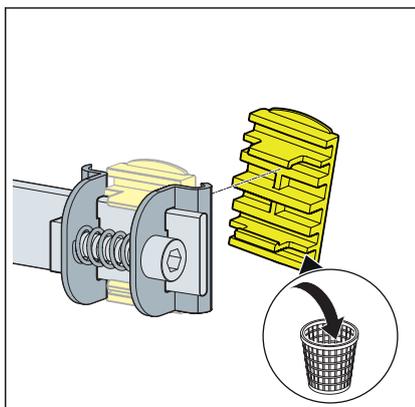


- Remove the plug-in pieces of the parallel connector and discard.

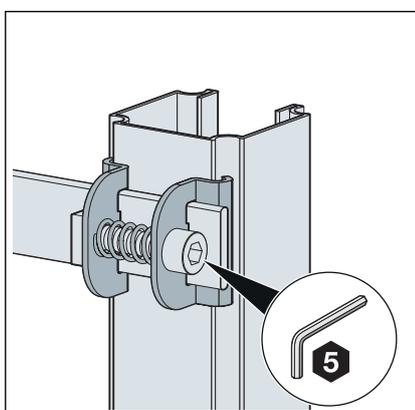


- Use the Allen key (SW 5) to mount the parallel connector on the closed side.


Setting the parallel connector

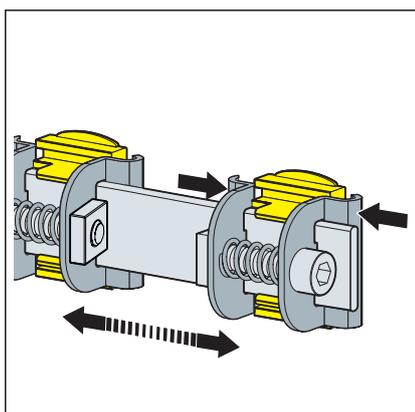

- Gently compress the tendon and move it to adjust the distance of the tendons of the parallel connector.

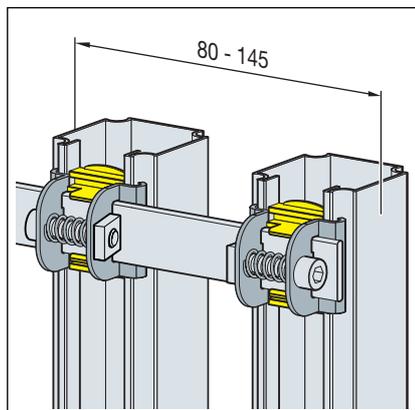

- Adjust the parallel connector to the required installation depth of 80 mm to 145 mm.

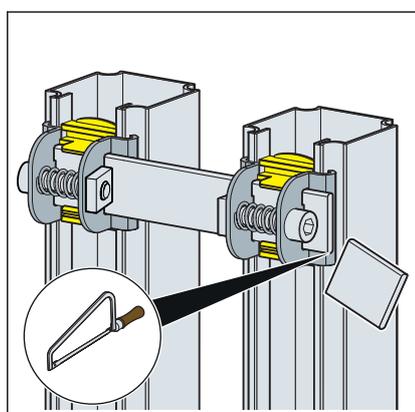

- For installation depths smaller than 145 mm, use a hacksaw to cut the tab of the parallel connector to length.

3.3 Disposal

Separate the product and packaging materials (e. g. paper, metal, plastic or non-ferrous metals) and dispose of in accordance with valid national legal requirements.