


Accessories Опора для поддона # 792407

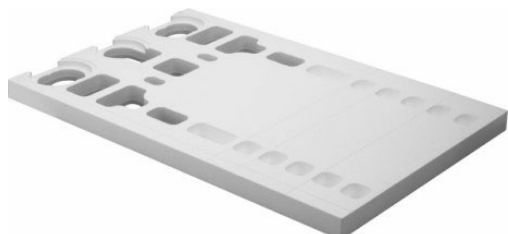

Опора для поддона	Размеры	Вес	Номер заказа
для душевых поддонов # 720145 - 720150, # 720166 и # 720217 - 720218 Stonetto, # 720151 - 720162 и # 720172 - 720173 P3 Comforts			
Цвета			
Вариант			

All drawings contain the necessary measurements which are subject to standard tolerances. They are stated in mm and are non-binding. Exact measurements, in particular for customised installation scenarios, can only be taken from the finished piece.